



Operating Tips

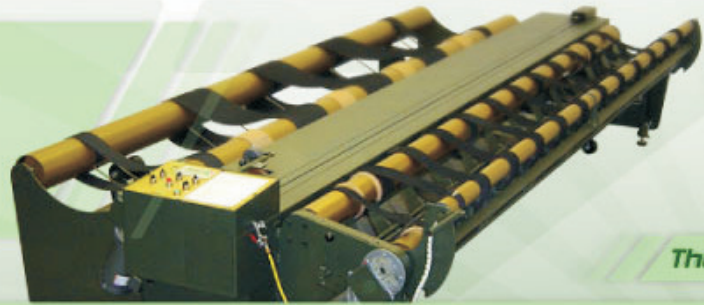


The MK-7

“ Precision Cutting... the EZ way ”

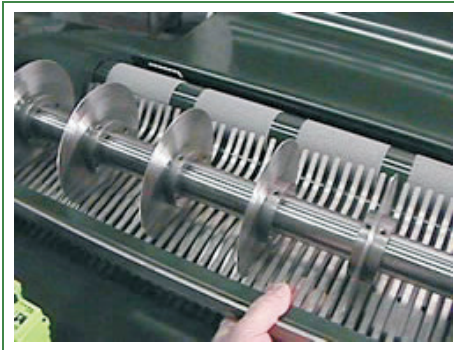

The screws must not be tight. The grate should be able to move up and down.

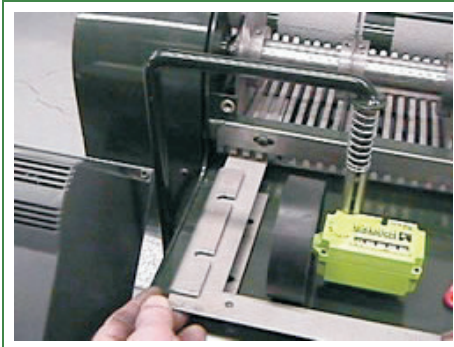

Position the guide to line up with the first blade. Set position. Use a straightedge to ensure accuracy.



Use the cradle to hold the roll.

Roll Cutting Machines

[Unpacking and setup](#)

[Roll up side cradle support pin](#)

[Controlling the roll on the load side cradle shuttle](#)

[Measuring, Cutting, and Packaging](#)

[Reverse Rolling / Remnants](#)

[Correct measuring the balance of a roll or remnant](#)

Base Cutting Machines

[Unpacking and setup](#)

[Blade Information \(EZ Slitter\)](#)

[Blade Information \(EZ Slitter Jr.\)](#)

[Tape Dispenser](#)

[Adjustments and Cutting](#)

Contact EZCUT

420 Des Meurons St. Unit 106
Winnipeg, Manitoba
Canada, R2H 2N9

Phone: 1.204.235.1122

Toll Free: 1.800.661.5156

Fax: 1.204.237.9339

Email: talktous@ezcut.com



Keep the edge of the carpet against the guide.



The carpet feeds through and out the back.