



At the start, line up leading edge with cutting track.



At the end, stop the carpet before it passes over the counting wheel.



Measure from the cutting track to the tail end of the carpet. Add this amount to the counter's measure.

Roll Cutting Machines

Unpacking and setup Roll up side cradle support

Controlling the roll on the load side cradle shuttle Measuring, Cutting, and **Packaging**

Reverse Rolling / Remnants Correct measuring the balance of a roll or remnant

Base Cutting Machines

Unpacking and setup Blade Information (EZ Slitter) Blade Information (EZ Slitter <u>Jr.)</u>

> Tape Dispenser Adjustments and Cutting



Contact EZCUT

420 Des Meurons St. Unit 106 Winnipeg, Manitoba Canada, R2H 2N9

> Phone: 1.204.235.1122 Toll Free: 1.800.661.5156 Fax: 1.204.237.9339

Email: talktous@ezcut.com