



Load carpet roll to the Gold Stripe. Left roller in FWD. Advance the carpet.



Advance carpet to the cutting track. Lower the top pressure wheel. Advance carpet just past middle of right cradle.



Insert core (optional). Close the arm to begin.

Roll Cutting Machines

Unpacking and setup
Roll up side cradle support
pin

Controlling the roll on the load side cradle shuttle

Measuring, Cutting, and

Packaging

Reverse Rolling / Remnants

Correct measuring the balance of a roll or remnant

Base Cutting Machines

Unpacking and setup
Blade Information (EZ Slitter)
Blade Information (EZ Slitter
Jr.)
Tape Dispenser

Adjustments and Cutting



420 Des Meurons St. Unit 106 Winnipeg, Manitoba Canada, R2H 2N9

Phone: 1.204.235.1122
Toll Free: 1.800.661.5156
Fax: 1.204.237.9339

Email: talktous@ezcut.com



Apply pressure to arm until roll forms.



Open arm as roll grows larger.



Pull and tap to control while rolling. Keep roll tight.



Use foot switch tape. (only on some models)



Remove any slack and buckles first. Left roller REV. Right roller OFF. Tap jog till smooth then cut.



Tuck stretch film into carpet.



With right roller in FWD, step on tape to begin. Walk with film while stepping on tape to complete. **EZ tip** - Small rolls may require that you close the arm to prevent the roll from popping out.



Complete wrapping.



Pull up the release lever and gently guide the arm down. Push the roll off. **EZ tip** - Put the right roller in FWD, then step on tape as you push for power assist!