


# Operating Tips

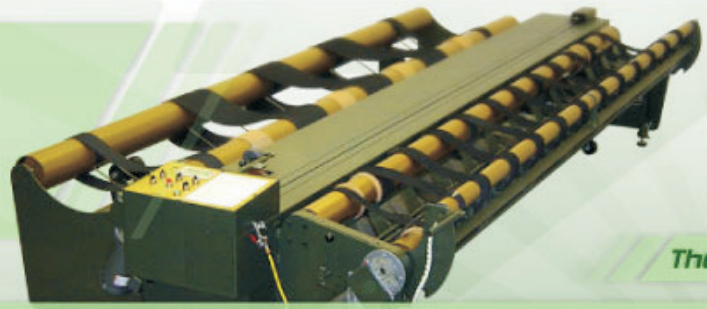

The MK-7

“ Precision Cutting... the EZ way ”



Remove the screws from the cover. Using the handle gently raise the cover.

## Roll Cutting Machines

[Unpacking and setup](#)

[Roll up side cradle support pin](#)

[Controlling the roll on the load side cradle shuttle](#)

[Measuring, Cutting, and Packaging](#)

[Reverse Rolling / Remnants](#)

[Correct measuring the balance of a roll or remnant](#)

## Base Cutting Machines

[Unpacking and setup](#)

[Blade Information \(EZ Slitter\)](#)


[Blade Information \(EZ Slitter Jr.\)](#)

[Tape Dispenser](#)

[Adjustments and Cutting](#)



Remove upper grate. Remove lower grate.

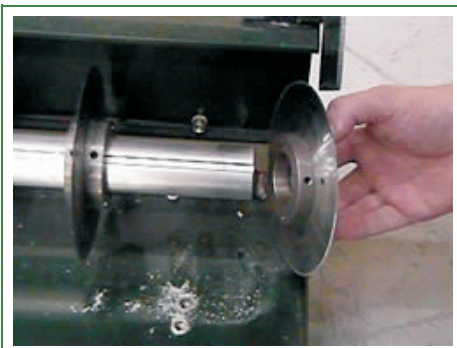

Loosen the set screws. Carefully slide the blade assembly off.

## **Contact EZCUT**

420 Des Meurons St. Unit 106  
Winnipeg, Manitoba  
Canada, R2H 2N9

**Phone:** 1.204.235.1122


**Toll Free:** 1.800.661.5156

**Fax:** 1.204.237.9339


**Email:** [talktous@ezcut.com](mailto:talktous@ezcut.com)



Line up the blade notches with the holes. Keep the set screws holes together.

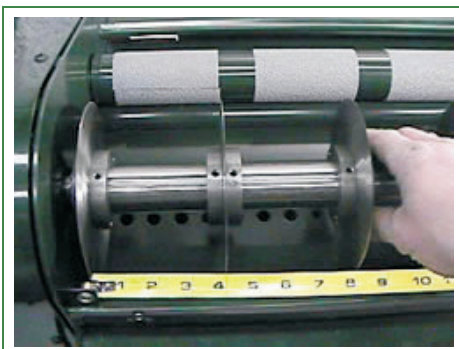

Loosen set screws. Carefully move blade assembly into position. Tighten screws.

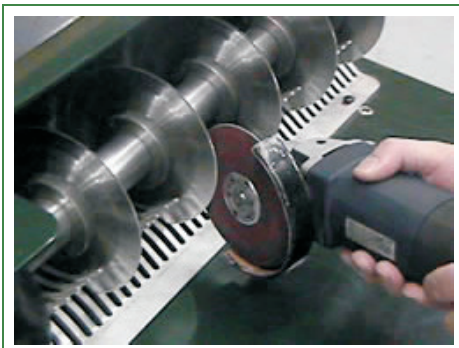

While the machine is running, using your angle grinder with 120grit. Sharpen both sides at about 15deg. The proper safety must be used while sharpening!

---